



## How to Program the Features:

Turn off the ignition.

Press the valet switch 5 times, wait for audible response, and then select the feature by pressing the valet button a number of times equal to the feature number. The siren will chirp once to indicate entry to Features Programming Mode.

Press the **Lock** (1 chirp) or **Unlock** (2 chirps) transmitter button to configure the feature as desired.

Repeat pressing the valet switch to access the next feature, and then again press the **Lock** or **Unlock** button to configure the feature.

