

Transmitter Operations:

- LOCK/ARM:** Press and release "lock" once
- UNLOCK/DISARM:** Press and release "unlock" once
- 2ND CH:** Press "3rd" button for 3 seconds
- PANIC:** Press "lock" for 3 seconds
- 3RD CHANNEL:** Press "4th" button for 3 seconds
- SILENT ARM/DISARM:** Press "3rd" button twice in 3 seconds
- SENSOR BYPASS:** Press "3rd" button within 5 seconds of arming the alarm



The 1-Way Transmitter

Part number: 4422-03
 Battery: 1 x CR2032
 Frequency: 433MHz

1. LOCK button
2. UNLOCK button
3. 3RD button
4. 4TH button

Programming Transmitters:

1. Be sure to have all transmitters present and be sure the system is in a disarmed/unlocked state.
2. Turn the ignition key "on".
3. Within 7 seconds of step 1, press the valet switch 5 times. The siren/horn will sound.
4. Press any button on one transmitter until you hear a single chirp.
5. Repeat step 4 for each controller to be programmed.
6. To exit programming, turn the ignition key "off" or the system will exit automatically if there is a 10 second delay between any steps.

Feature Programming:

1. Turn the ignition key "on", then "off"
2. Within 7 seconds of step 1, press the valet switch 5 times. The siren/horn will sound.
3. Press the valet switch the number of times equal to the feature number you wish to access.
4. Press the transmitter button that corresponds to the desired setting.
5. To change additional features, repeat steps 3-4.
6. To exit programming, turn the ignition key "on", then "off" or the system will exit automatically if there is a 10 second delay between any steps.

Programmable Features Matrix

Feature Programming: Ignition on, off, press valet 5 times		
# Feature	Lock Button	Unlock Button
1 Auto-Rearm	ON	OFF
2 Last Door Arming	ON	OFF
3 Doors Lock With Last Door Arming	ON	OFF
4 Double Pulse Unlock	2 Pulses	1 Pulse
5 Immobilizer Mode	ON	OFF
6 Siren & Horn or Horn	Siren & Horn	Horn
7 Shock Sensor False Alarm Bypass	ON	OFF
8 Dome Light Delay Bypass	ON	OFF
9 Ignition Activated Anti Car-Jacking	ON	OFF
10 Remote & Door Activated Anti Car-Jacking	ON	OFF
11 Dome Light or Window Roll Up	Dome Light	Window Roll Up
12 3rd Channel Output	Momentary	Window Roll Up
13 Ignition Controlled Lock & Unlock	ON	OFF
Feature controlled by Jumper on side of alarm brain:		
Lock Pulse Time	Jumper In = .8 sec	Jumper Out = 4 sec

AL-560 Wiring Diagram

Brown/Black : _
 This wire can be configured (Programmable feature # 6), to honk the horn in addition to the **Brown wire** operating the siren, or take over all of the Siren's functions SO THAT NO SIREN IS NECESSARY

Café/con lista Negra: _
 Este cable se puede programar (función #6), a sonar el claxon en conjunto al cable Café_ operar la Sirena, O TOMAR TODAS LAS FUNCIONES DE LA SIRENA PARAQUE NO HAGA FALTA INSTALAR SIRENA.

