

Standard Features: The Freedom-140 LA features light flash, an electronic siren and horn honk output, and a built-in dual-zone shock sensor. This unit includes two stylish 4-button transmitters, a mini electronic 6-tone siren, a starter interrupt socket and relay.

Two Transmitters Included: Stylish mini 4-Button stainless steel -trimmed transmitters with Lock, Unlock & 2 small lower buttons.

Omega part
#4412-09SSI

Omega part
#4412-09EI

Transmitter Operations:

Lock Button - Press and release to arm/lock. Press and hold to activate panic.

Unlock Button - Press and release to disarm/unlock.

Small Middle Button- Press and hold 3 seconds for Auxiliary Channel. Press twice for Silent Arm / Disarm.

Small Bottom Button- Press and hold to activate Remote Anti-Carjack.



How to Code the Transmitters: Turn “on” the ignition, then press the valet switch 5 times and wait for siren to chirp confirmation of entry into programming mode. Press and release any button on each remote to be coded (one at a time). The system will respond to each with an audible confirmation.

Programmable Features

The alarm has 8 programmable features which allow it to be customized to suite many individual needs.

Feature #	Default	Switch On	Switch Off
Feature #1 Internal Shock Sensor	ON	ON	OFF
Feature #2 Double Pulse Unlock	Single	Double	Single
Feature #3 Last Door Arming & Locking	ON	ON	OFF
Feature #4 Automatic Rearming	ON	ON	OFF
Feature #5 Siren & Horn or Horn	Siren & Horn	Siren & Horn	Horn Only
Feature #6 Ignition Activated Anti Car-Jacking	OFF	ON	OFF
Feature #7 Remote & Door Activated Anti Car-Jacking	OFF	ON	OFF
Feature #8 Ignition Controlled Lock & Unlock	ON	ON	OFF

Program these features by first disconnecting power to the alarm (remove the fuse on the red wire), then selecting the position of “Dip Switches” as needed, and then repowering the alarm.

