

# K-9 CAR ALARM

## K9-160-LA

### Remote Security System

**Standard Features:** The K9-160 LA features light flash, an electronic siren and horn honk output, and a built-in dual-zone shock sensor. This unit includes two stylish 4-button transmitters, a mini electronic 6-tone siren, a starter interrupt socket and relay.

**Two Transmitters Included:** Stylish 4-Button stainless steel -trimmed transmitters with Lock, Unlock & 2 lower buttons.

#### Transmitter Operations:

**Lock Button** - Press and release to arm/lock. Press and hold to activate panic.

**Unlock Button** - Press and release to disarm/unlock.


“🔊” **Button**- Press and hold 3 seconds for Auxiliary Channel. Press twice for Silent Arm / Disarm.

“🚗” **Button**- Press and hold to activate Remote Anti-Carjack.

**How to Code the Transmitters:** Turn “on” the ignition, then press the valet switch 5 times and wait for siren to chirp confirmation of entry into programming mode. Press and release any button on each remote to be coded (one remote at a time). The system will respond to each remote with an audible confirmation.

Replacement  
Omega part  
#4419-07

Replacement  
Omega part  
#4419-07

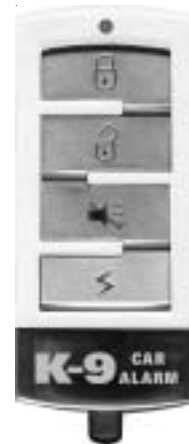

### Programmable Features

The alarm has 8 programmable features which allow it to be customized to suite many individual needs.

| Feature #   | Default      | Switch On    | Switch Off |
|---|--------------|--------------|------------|
| Feature #1 Internal Shock Sensor                    | ON           | ON           | OFF        |
| Feature #2 Double Pulse Unlock                      | Single       | Double       | Single     |
| Feature #3 Last Door Arming & Locking               | ON           | ON           | OFF        |
| Feature #4 Automatic Rearming                       | ON           | ON           | OFF        |
| Feature #5 Siren & Horn or Horn                     | Siren & Horn | Siren & Horn | Horn Only  |
| Feature #6 Ignition Activated Anti Car-Jacking      | OFF          | ON           | OFF        |
| Feature #7 Remote & Door Activated Anti Car-Jacking | OFF          | ON           | OFF        |
| Feature #8 Ignition Controlled Lock & Unlock        | ON           | ON           | OFF        |

Program these features by first disconnecting power to the alarm (remove the fuse on the red wire), then selecting the position of “Dip Switches” as needed, and then repowering the alarm.

