



Classic-EDP2

Keyless Entry & Security System

Standard Features:

NEW! Data port for IntelliKit plug-in bypass kits and databus modules!

NEW! Programmable Features!

NEW! 2 additional arm/disarm; or horn, lights or remote channel outputs!

K-9 is one of the most recognized and respected names in vehicle security, and the legend continues with the Classic-EDP2. Offering serious No-Nonsense Security that is comprehensive in features, yet affordable and easily expandable. Features include the amazing 2-in-1 Psycho Siren, reliable AU-84Tn magnetic dual-zone shock sensor, Selectable Coded Override (now programmable!) and Easy Valet. Special installer features are the new plug-in IntelliKit data port, plug-in doorlock output port, plug-in sensor port, plug-in port for an optional backup battery, and new Factory Alarm outputs which can also be programmed for horn, lights, or 4th and 5th channel output options.

Two Transmitters included:

2 Blue (glow) button transmitters.

(the Classic-EDP2 is capable of being upgraded with the 2-way Echo)

Operations: Lock Button - Press and release to Arm/Lock. Press and hold to activate Remote Panic with locking doors.

Unlock Button - Press and release to Disarm/Unlock. Press and hold to activate Remote Panic with unlocking the doors.

3rd Channel - Press and hold **Lock** and **Unlock** together.

"II" Button - Press and hold to activate trunk release. Press and release twice to arm/lock - disarm/unlock without confirmation chirps.

"III" - Press and hold to activate remote panic, or change to 3rd Channel.

New! Optional Additional Channels - 4th and 5th Channel outputs are available as programmable features options.

4th Channel - Press the **Lock** and **"II"** buttons together.

5th Channel - Press the **Unlock** and **"III"** buttons together.



Omega part #
148-07

The Classic-EDP2 is



MORE Programmable Features Options! The K-9 Classic-EDP2 is extremely versatile, due to a comprehensive array of 24 programmable features, with many of the individual Features offering as many as four setting choices.

Programmable Features

How to program: Turn the ignition ON, then OFF. Press the Valet Switch **5** times (the siren briefly sounds; the Status LED lights **Blue**). Then select the desired feature by pressing the Valet Switch the same number of times as the feature number. After the system chirps the same number back, choose the feature's setting by pressing the controller or transmitter buttons: the **Lock** button (L); **Unlock** button (U); **II** button (2) or **III** button (3).


Features Ignition on, off, then press Valet Switch **5** times (Status Light turns on steady).

# Feature	Default Setting	Option	2nd Option	3rd Option
1 SecureCode	1 & 0	2 stages, of up to 9 presses each (total of 99 possible combinations)		
2 Last Door Arming	OFF (L)	ON w/o doorlock (U)	ON w/ doorlock (2)	
3 Automatic Rearming	OFF (L)	ON w/o doorlock (U)	ON w/ doorlock (2)	
4 Starter Interrupt Functions	Alarm only (L)	OFF (U)	Automatic (2)	
5 Ignition Activated Override	OFF (U)	ON (L)		
6 Doors Lock With Ignition On	ON (L)	OFF (U)		
7 Doors Unlock With Ignition Off	ON (3)	OFF (L)	o/p 1 only (U)	o/p 2 only (2)
8 Open Door Bypass to above	ON (L)	OFF (U)		
9 Confirmation Chirps	ON (L)	OFF (U)	exc. Valet (2)	Valet only (3)
10 Confirmation Chirp Volume	Medium Loud (2)	Low (L)	Med Lo (U)	Loud (3)
11 Activated Alarm Cycle	30 Seconds (L)	60 Sec. (U)	90 Sec. (2)	120 Sec. (3)
12 Lights On Upon Disarm	ON (L)	OFF (U)		
13 Disarm Upon Trunk Release	ON (L)	OFF (U)		
14 Arming Delay	3 Seconds (L)	15 Seconds (U)	30 Seconds (2)	45 Seconds (3)
15 Steady Siren / Pulsed Horn	Steady Siren (L)	Pulsed Horn Lo (U)	Pulsed Med. (2)	Pulsed Hi (3)
16 Alarm Functions Bypass	OFF (U)	ON (L)		
17 Ignition Anti-Carjacking	OFF (U)	ON (L)		
18 Door Anti-Carjacking	OFF (U)	ON (L)		
19 Remote Anti-Carjacking	OFF (U)	ON (L)		
20 Open Door Warning at Arm	OFF (U)	ON (L)		
21 III Button Operation	3rd Chan. (L)	Panic (U)	4th Chan. (2)	5th Chan. (3)
22 Doorlock Functions	.8 second (L)	3 Seconds (U)	Double Unlock (2)	Total Closure (3)
23 (-) Parking Light Output	Parking Light (U)	Arm (L)	Chan. 4 Latch (2)	Chan. 4 On Demand (3)
24 (-) Horn Output	Horn, med (U)	Disarm (L)	Chan. 5 Latch (2)	Chan. 5 On Demand (3)

How to program Transmitters: Turn "on" the ignition, then press the Valet Switch 5 times and wait for siren confirmation of entry into programming mode. Press and release the Lock transmitter button on each remote to be coded (one at a time). The system will respond to each with an audible confirmation. **New!** Unauthorized Transmitter Alert (UTA™) is user-programmable; operation now optional.

Classic-EDP2

Wiring Diagram Overview

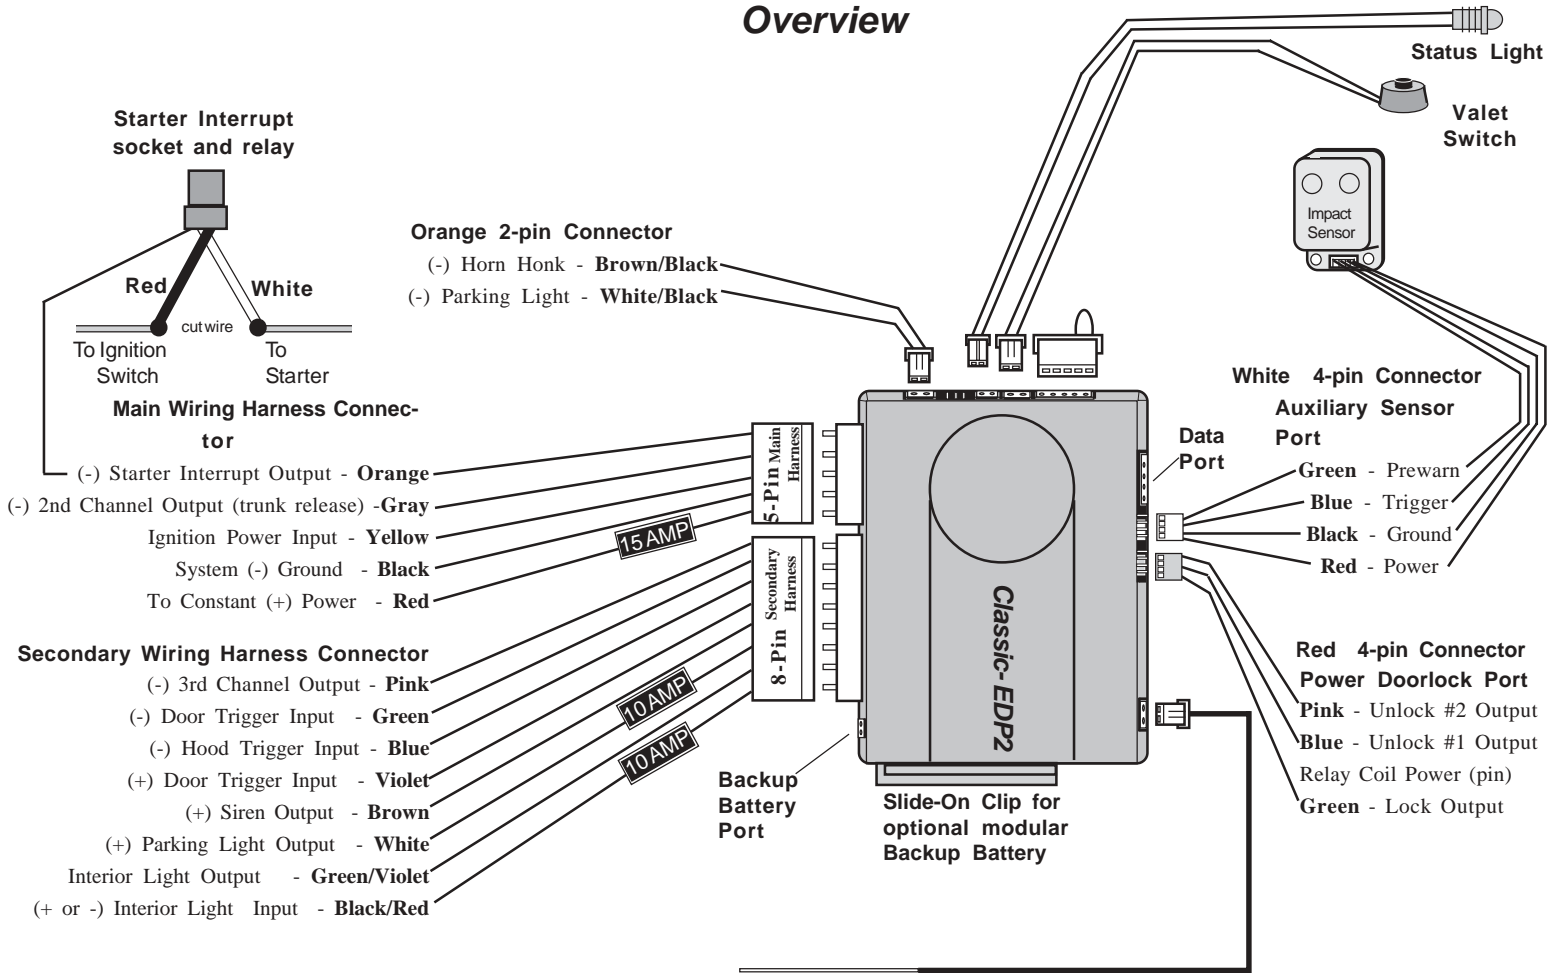

Coaxial Antenna Cable: Route end as high as practical in vehicle, away from metal.
Note: May not be present, or may be removed if the optional 2-way Echo kit is used.